

BH-580

Universal Wireless Spk/mic (headset)



BH-580 Overview


BH-580 is the Wireless Speaker Microphone for two way radio.

By establish a link between BH-580 and wireless adaptor*,

communications are securely transmitted from the radio adapter to the BA10


without use of wires.

Controls & Connections

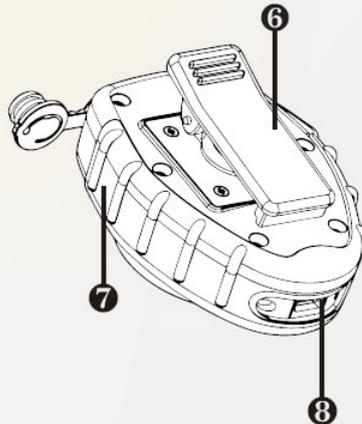

- ① Tactical PTT
- ② Jack for earphone and microphone
- ③ Power and LED indicator / Phone button
- ④ PTT
- ⑤ Volume Up / Volume Down
- ⑥ Clothing Clip
- ⑦ Rubber sealed
- ⑧ Micro-USB and Charger

BT-580 On/OFF

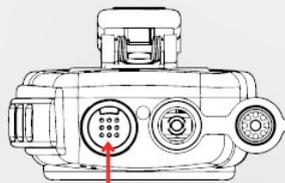


Power switch to power on/off

Power ON/OFF LED and Tone Indicators

Power	LED Indication (Audio and Standalone PTT Device)	Tone Indication (Audio Device)
On	Blue LED blinks 3 times then off	Power On Tone. Hold for 3 second
Off	Blue LED blinks 3 times then POWER OFF	Power OFF Tone. Hold for 3 seconds
Pairing	Blue LED blinks, every 1 sec.	Pairing mode Tone, Hold for 6 second

BH-580 Pairing

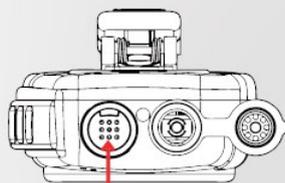

Press 6 sec to Pairing mode


- First time connection, verify that both the host and the wireless device are in pairing mode
- Press and hold the power button for 6 sec, then into pairing mode, Blue LED blinks every 1 sec and pairing mode Tone.
- Once the devices are paired successfully, a ring indication is played on the audio device. And blue LED illuminate for 2 sec. then blue Led Heartbeat: Long OFF and Short ON

Wireless Link and Pairing Indicators

State	LED Indication (Audio and Standalone PTT Device)	Tone Indication (Audio Device)
Pairing	Blue LED blinks	Pairing Ready Tone
Paired Successfully	Blue LED Solid for 2 seconds	Pairing Successful Tone
Wireless Link Connected with Host	Blue LedHeartbeat: Long OFF and Short ON	Connected Tone
Wireless Link Disconnected from Host	Blue LED Solid ON	Disconnected Tone every 1 minutes for 10 minutes

REXON[®]
What An Excellent Radio!


Volume adjust

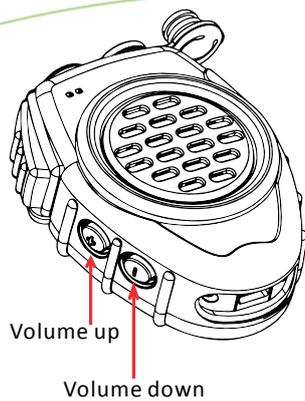

Volume Indicators

Button Push	Tone Indication (Audio Device)
Volume Up	Volume Tone with increased loudness
Volume Down	Volume Tone Played with decreased loudness


Charging

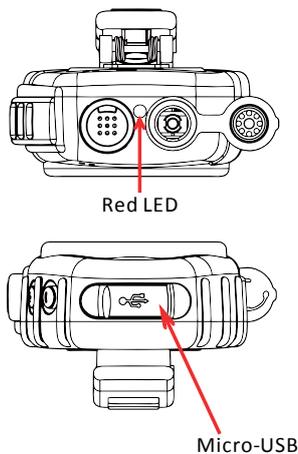

Battery Alerts and Charging LED Indicators

State	LED Indication	Tone Indication
Low Battery Indication	Red LED Heartbeat	Low Battery Tone every 1 minute, less than 30min minutes battery life
Charging	Red LED illuminated	
100% charged	Red LED off	

Dark mode

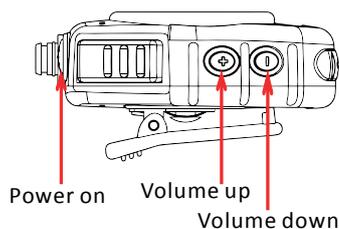

LED OFF in all condition

- Dark Mode allows the user to turn off the LEDs on the wireless device.

Placing the wireless device in Dark Mode:

- The wireless device can be put in Dark Mode during power ON by simultaneously pressing Volume Up and Volume Down buttons.
- A feedback tone is heard to alert the user that the LEDs are turned off.
- Once the device is turned on, it can be toggled IN and OUT of Dark Mode by simultaneously pressing power button, Volume Up and Volume Down for 3 seconds.

Trouble shooting

If at any time the wireless connection cannot be re-established, or the device is operating incorrectly:

1. Power Cycle the BH-580 and the device. The connection should be re-established.
2. If the problem continues; Refer to "Pairing Your Audio Device" to repeat the connection.

REXON TECHNOLOGY CO.,LTD

Telephone:+886-4-24914141 Fax:+886-4-24912042

Address: 261, Jenhua Rd., Dali Dist, Taichung City 412 Taiwan,

Website: <http://www.rexontec.com.tw>

E-Mail: rexontec@rexontec.com.tw